 


Assembling

Fix handle on the Heater by using the provided 2PCS of M6 * 12mm screws.

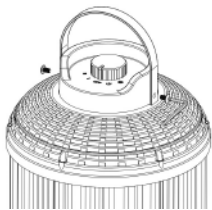

- Although the patio heater is shower proof, do not use when raining or in wet conditions.
- Always disconnect the power cable from the electrical supply, when the patio heater is not in use.



This warning symbol indicates that the surface is hot and caution is required.



This warning symbol indicates that the heater should not be covered.

Care and maintenance

- When disconnected from the electrical supply, clean the outside of the patio heater with a damp cloth. Never use corrosive or solvent cleaners or immerse in water.
- Any maintenance or repairs including replacing the halogen tube should only be carried out by a qualified electrician or by a recommended service center.

Trouble shooting

If the heater will not operate, please check the following before seeking repair of service:

- Check if the power cord is plugged into an electrical outlet, if not plug in.
- Check if electricity to the main fuse is working.
- Make certain the power switches are turned on. If not, choose a setting.



 
WEEE



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information please contact the local authority or your retailer where you purchased the product.

Operation

- Connect the power cable to a 13 amp supply that is located in a safe, dry area.
- Turn the switch Knob to “ / ”, it means the heater is working and on the minimum heating position (600W).
- Turn the switch Knob to “ // ”, it means the heater is working and on the maximum heating position (1200W).
- Turn the switch Knob to “ ↻ ”, it means the heater is working and on the minimum heating position (600W), and the heater lamp is Spinning back and forth.
- Turn the switch Knob to “ ↻ ”, it means the heater is working and on the maximum heating position (1200W), and the heater lamp is Spinning back and forth.
- Turn the switch Knob to OFF position, the heater is in off mode.

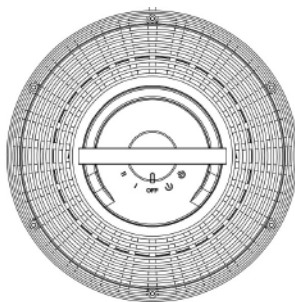

Storage

If the heater will not be used for a long period of time, store it in a cool, dry location when not in use. To prevent dust and dirt build-up, use the original packaging to repack the unit.

 
NOVA
LIFE

INSTRUCTIONS MANUAL

for TERRASSEVARMER

Double heating table heater

Art Nr. 78001-059-71

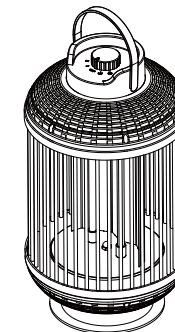

Technical specification

- Power supply 220-240V
~ 50-60Hz
- Wattage 1200W
- Insulation class I

Please read these instructions carefully before using your new heater

www.lampehuset.no

Unpack the halogen heater making sure that all the items are present and that there are no components left in the box and that the heater head is free from any packing material.

Using the detailed drawing follow the steps to assemble your halogen heater.

Do not connect the halogen heater to the electrical supply until all the assembly is complete.

Do not connect the halogen heater to the electrical supply if any of the components or the power cord is damaged in any way.

Using the detailed drawing follow the steps to assemble your halogen heater.

If in doubt contact your supplier.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Warning:

This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

Children of less than 3 years should be kept away unless continuously supervised.

Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

Cautions:

CAUTION — Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.

The heater must not be located immediately below an electrical socket-outlet.

Don't use this heater in the immediate surroundings of a bath, a shower or a swimming pool.

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer or connected to a circuit that is regularly switched on and off by utility.

Only use the halogen heater on a firm solid horizontal area where all the feet on the base are in contact with the floor.

(Should the heater be tilted or fall over the auto cut off switch will activate)

1. Site the heater outside or in a large open area and well away from any obstructions such as branches or where the heater is near any objects that can be effected by heat, such as furniture, curtains or other inflammable objects (minimum distance 1 metre).
2. Do not use near bath tubs, wash areas or swimming pools.
3. Do not use in unventilated areas
4. Do not use where gas, petrol, paint or other inflammable goods are stored.
5. Do not push any items through, obstruct or cover the grill of the heater head.
6. Do not position immediately above or below an electrical socket.
7. Do not move when connected to an electrical supply and always wait for the patio heater to cool down before storing away.
8. Do not touch the heater head when in use.
9. Do not leave turned on and unattended especially when children and or animals are in the vicinity.
10. The indication of the different positions of switches shall be visible from a distance of 1M.
11. The Marking concerning covering shall be visible after the heater has been installed. It shall not be placed on the back of portable heaters.
12. The unit must be placed with the clearance of 100cm to the wall.

13. The unit must be correctly installed according to the instructions.
14. The unit must be securely placed on a horizontal and flat surface.
15. The unit is at high temperature during operation. It keeps hot for a period after shut down. Potential danger would occur when touching it during this period.
16. Don't place the unit closed to curtain and/or other flammable objects. Otherwise there will be a danger of catching fire.
17. Don't cover the unit with anything during operation or a short time after it's shut down.
18. Don't wrap the power supply cord on the unit.
19. The unit must be handled with care, and avoid vibration or hitting.
20. The unit must be securely grounded during operation.
21. If the unit gets damaged, it must be repaired by professional electricians.
22. When the power supply cord is damaged, it must be replaced by authorized agent or other professional people to avoid danger.
23. The unit must not be positioned under a socket.
24. When assembling, keep clear from any board or flammable material.
25. The unit must be supervised by adults if it's used by a child.
26. The unit is for household use only. It is not safe to use on a building site, greenhouse, barn or stable where there's flammable dust.
27. The head of the unit is at high temperature during operation. Unplug the unit and wait till it cools before cleaning.
28. Don't use this unit in place where causticity or volatile air exists, i.e. dust, steam, gas, etc.
29. Don't use this unit as a cloth drier or towel drier.
30. Don't use this unit as a sauna heater.
31. Don't use this unit as a room heater.
32. Don't use this unit in place of animal propagating and raising.
33. Don't immerse this unit into water for cleaning.
34. The unit should be plugged in a socket, which is easily visible and reachable.
35. One dark point may exist on the surface of the heating elements during the first few minutes after it is turned on. This is normal, and will not affect the performance of the unit.
36. The heater must not be located immediately below a socket-outlet.
37. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
38. WARNING! In order to avoid overheating, do not cover the heater
39. Do not use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exist if the heater is covered or positioned incorrectly.
40. The appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been supervision or instruction.
41. DO NOT COVER! Don't cover the unit with anything during operation or a short time after it's shut down.
42. Do not use the heater with a programmer, timer or any other device that switches the heater on automatically.